


## How To: Washer A- LOCKED

Cardinal Glennon

Washer A can be sensitive and sometimes 'lock up'.

If this message ever shows up on the screen, it just means that the Control Lock (like a child lock) has been turned on, and most likely, by accident.

The door will still open and close, but the buttons on the machine are now **Locked**.

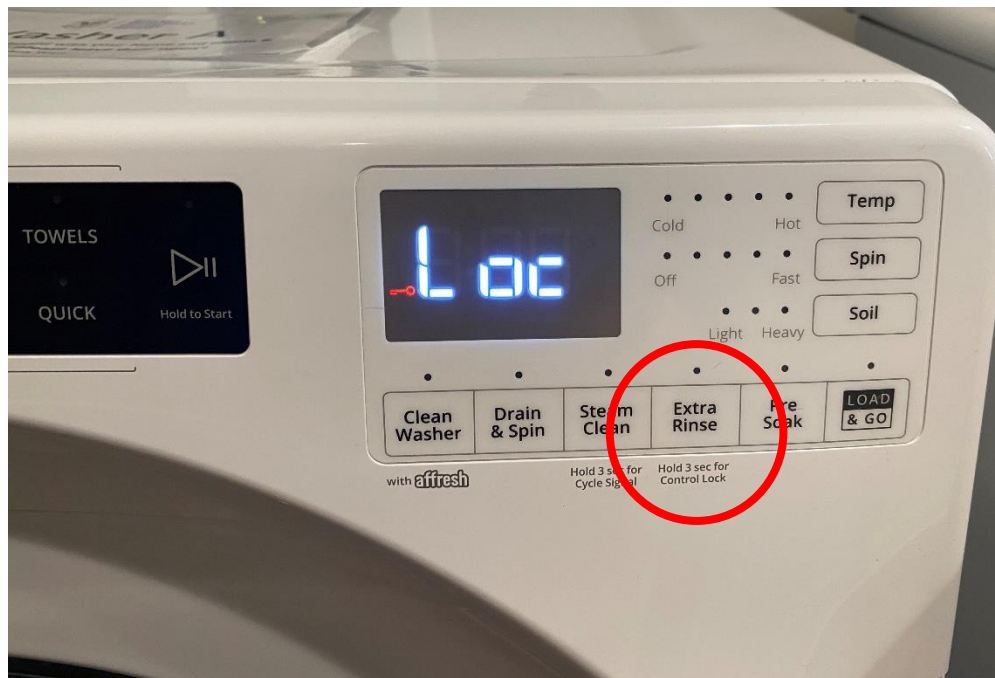

To turn off the Lock, **Press and hold the Extra Rinse button for 3 seconds.**

The screen will count down 3 – 2 – 1, and then make a chiming noise, meaning that the lock is off and you can press buttons as needed now.